

TTR 50 E

EN

OPERATING MANUAL
DEHUMIDIFIER



 **TROTEC**

Table of contents

Notes regarding the operating manual..... 2

Safety 2

Information about the device..... 5

Transport and storage..... 6

Assembly and start-up 6

Operation 8

Errors and faults 11

Maintenance 12

Technical annex..... 15

Disposal 18

Notes regarding the operating manual

Symbols



Warning of electrical voltage

This symbol indicates dangers to the life and health of persons due to electrical voltage.



Warning

This signal word indicates a hazard with an average risk level which, if not avoided, can result in serious injury or death.



Caution

This signal word indicates a hazard with a low risk level which, if not avoided, can result in minor or moderate injury.

Note

This signal word indicates important information (e.g. material damage), but does not indicate hazards.



Info

Information marked with this symbol helps you to carry out your tasks quickly and safely.



Follow the manual

Information marked with this symbol indicates that the operating manual must be observed.

You can download the current version of the operating manual and the EU declaration of conformity via the following link:



TTR 50 E



<https://hub.trotec.com/?id=46714>

Safety

Read this manual carefully before starting or using the device. Always store the manual in the immediate vicinity of the device or its site of use.



Warning

Read all safety warnings and all instructions.

Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Do not use the device in potentially explosive rooms or areas and do not install it there.
- Do not use the device in aggressive atmosphere.
- Only put up the device in an upright, stable position on firm ground.
- Let the device dry out after a wet clean. Do not operate it when wet.
- Do not use the device with wet or damp hands.
- Do not expose the device to directly squirting water.
- Do not cover the device during operation.
- Do not sit on the device.
- This device is not a toy. Keep away from children and animals. Do not leave the device unattended during operation.
- Check accessories and connection parts for possible damage prior to every use of the device. Do not use any defective devices or device parts.

- Ensure that all electric cables outside of the device are protected from damage (e.g. caused by animals). Never use the device if electric cables or the power connection are damaged!
- The mains connection must correspond to the specifications in the Technical annex.
- Insert the mains plug into a properly fused mains socket.
- Observe the device's power input, cable length and intended use when selecting extensions to the power cable. Completely unroll extension cables. Avoid electrical overload.
- Do not under any circumstances use the device if you detect damages on the mains plug or power cable. If the power cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Defective power cables pose a serious health risk!
- Before carrying out maintenance, care or repair work on the device, remove the mains plug from the mains socket. Hold onto the mains plug while doing so.
- Switch the device off and disconnect the power cable from the mains socket when the device is not in use.
- When positioning the device, observe the minimum distances from walls and other objects as well as the storage and operating conditions specified in the Technical annex.
- Make sure that the air inlet and outlet are not obstructed.
- Make sure that the suction side is kept free of dirt and loose objects.
- Never insert any objects or limbs into the device.
- Do not remove any safety signs, stickers or labels from the device. Keep all safety signs, stickers and labels in legible condition.
- Only transport the device in an upright position with an emptied condensation tank or drain hose.
- Discharge the collected condensate before transport and storage. Do not drink it. Health hazard!
- Only use original spare parts, for otherwise safe and functional operation cannot be ensured.

Intended use

Only use the device for drying and dehumidifying room air, while adhering to and following the technical data.

In addition, the device may also be used as a kind of clothes dryer to dry wet laundry.

Intended use comprises:

- dehumidifying and drying:
 - living rooms, bedrooms and basements
 - holiday homes, camper vans
- maintaining the dryness of:
 - storage spaces, archives, laboratories, garages
 - changing rooms etc.

Foreseeable misuse

- The device is not intended for industrial use.
- Do not place the device on wet or flooded ground.
- Do not place any objects, e.g. clothing, on the device.
- Do not use the device out of doors.
- Do not use the device in wet rooms (e.g. bathrooms or laundry rooms).
- Never immerse the device in water.
- Do not make any unauthorised modifications, alterations or structural changes to the device.
- Any use other than the intended use is regarded as a reasonably foreseeable misuse.

Personnel qualifications

People who use this device must:

- be aware of the dangers that occur when working with electric devices in damp areas.
- have read and understood the operating manual, especially the Safety chapter.

Maintenance tasks which require the housing to be opened must only be carried out by specialist companies for cooling and air-conditioning or by Trotec.

Safety signs and labels on the device

Note

Do not remove any safety signs, stickers or labels from the device. Keep all safety signs, stickers and labels in legible condition.

The following safety signs and labels are attached to the device:



Note regarding the rundown period

Indicates that the device continues running for 4 minutes after the On/Off button (24) has been pressed.



Note

Do not operate the device without an air filter inserted into the air inlet!

Without the air filter, the inside of the device will be heavily contaminated. This could reduce the performance and result in damage to the device.

Behaviour in the event of an emergency

1. Switch the device off.
2. Disconnect the device from the mains feed-in: Hold onto the mains plug while pulling the power cable out of the mains socket.
3. Do not reconnect a defective device to the mains.

Residual risks



Warning of electrical voltage

Work on the electrical components must only be carried out by an authorised specialist company!



Warning of electrical voltage

Risk of electric shock!

The device does not have the appropriate protection class for use in wet rooms.

There is a risk of electric shock!

Never use the device in wet rooms (e.g. in bathrooms and laundry rooms) and never immerse the device in water!



Warning of electrical voltage

Before any work on the device, remove the mains plug from the mains socket!

Do not touch the mains plug with wet or damp hands. Hold onto the mains plug while pulling the power cable out of the mains socket.



Warning

Dangers can occur at the device when it is used by untrained people in an unprofessional or improper way! Observe the personnel qualifications!



Warning

The device is not a toy and does not belong in the hands of children.



Warning

Risk of suffocation!

Do not leave the packaging lying around. Children may use it as a dangerous toy.

Information about the device

Device description

The device TTR 50 E works on the desiccant principle without a compressor and without any cooling agent.

The fully automatic control and the condensation tank with integrated overflow protection ensure fault-free operation.

The fan sucks in damp room air via the air inlet with air filter, the condenser and the desiccant wheel located behind it.

Within the internal regeneration circuit the air is led via a heating element, it dries the desiccant wheel and leads the moist, warm air through the condenser. At the cooler condenser, heat is withdrawn from the room air and cooled below dew point. The water vapour contained in the room air precipitates in form of condensate. The condensate drops into the condensation tank. Optionally, the condensate can be discharged via a condensation hose connected to the connection opening.


The drier air, thus conditioned, is fed back to the room air via the air outlet. The drier air mixes with the air in the room. The relative humidity in the room where the device is positioned is reduced by the constant circulation of the room air.

A float is attached inside the condensation tank, which in case of a filled condensation tank interrupts the dehumidification. When switching off, the device emits an acoustic signal and the *Full* LED on the control panel is illuminated (see Operation chapter). The indicator light only goes out again once the emptied condensation tank is reinserted.

The device can reduce the relative humidity of a room to approx. 50 %.

In addition, the device may also be used as a kind of clothes dryer to dry wet laundry.

Device depiction

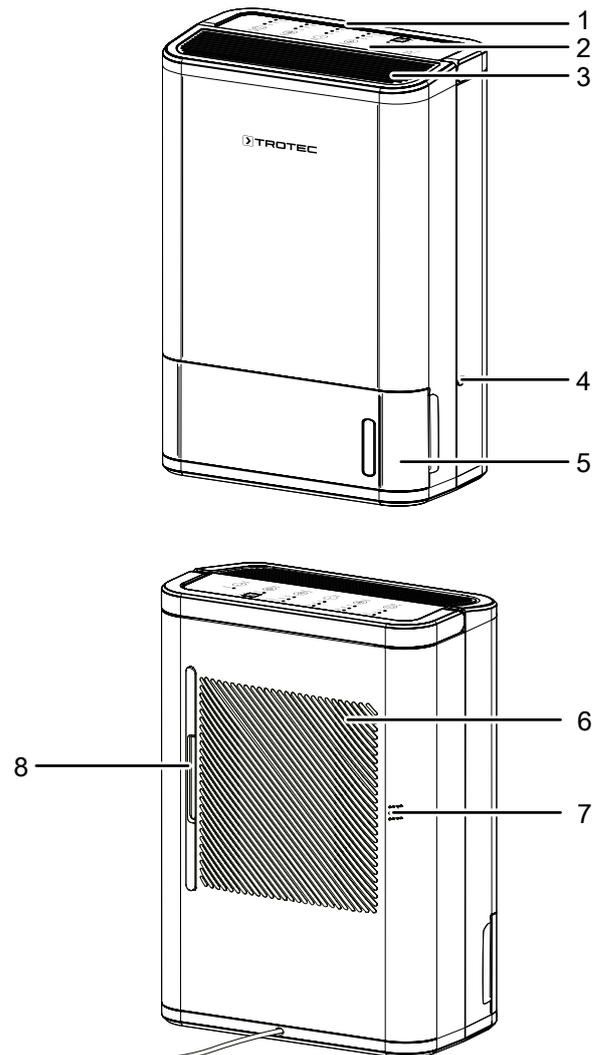

No.	Designation
1	Handle
2	Control panel
3	Air outlet
4	Condensation hose connection
5	Condensation tank
6	Air inlet
7	Humidity sensor
8	Air filter

Transport and storage

Note

If you store or transport the device improperly, the device may be damaged.

Note the information regarding transport and storage of the device.

Transport

To make the device easier to transport, it is fitted with a carry handle.

Before transporting the device, observe the following:

- Switch the device off.
 - Due to the follow-up time of the internal components, the device only switches off completely after approx. 4 minutes.
- Hold onto the mains plug while pulling the power cable out of the mains socket.
- Drain the remaining condensate from the device and the condensation drain hose (see chapter Maintenance).
- Do not use the power cable to drag the device.

After transporting the device, proceed as follows:

- Set up the device in an upright position after transport.
- Leave the device to rest for one hour before switching it back on. Otherwise the device could be damaged and no longer work properly. Any warranty claims will be voided in this case.

Storage

Before storing the device, proceed as follows:

- Drain the remaining condensate from the device and the condensation drain hose (see chapter Maintenance).
- Hold onto the mains plug while pulling the power cable out of the mains socket.

When the device is not being used, observe the following storage conditions:

- Store the device in a dry location and protected from frost and heat.
- Store the device in an upright position where it is protected from dust and direct sunlight.
- If required, use a cover to protect the device from invasive dust.
- Place no further devices or objects on top of the device to prevent it from being damaged.

Assembly and start-up

Scope of delivery


- 1 x device
- 1 x Air filter
- 1 x manual

Unpacking the device

1. Open the cardboard box and take the device out.
2. Completely remove the packaging.
3. Fully unwind the power cable. Make sure that the power cable is not damaged and that you do not damage it during unwinding.

Start-up

When positioning the device, observe the minimum distance from walls or other objects as described in the chapter Technical annex.

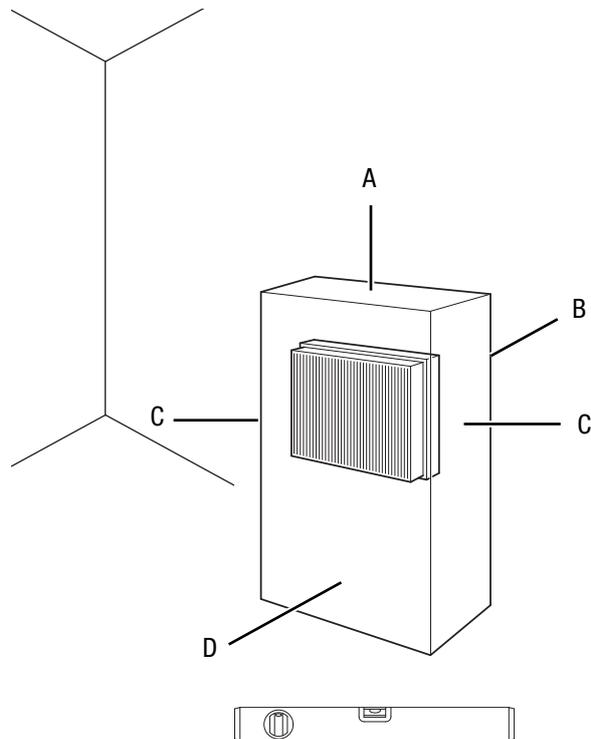

- Before restarting the device, check the condition of the power cable. If there are doubts as to the sound condition, contact the customer service.
- Only put up the device in an upright, stable position on firm ground.
- Do not create tripping hazards when laying the power cable or other electric cables, especially when positioning the device in the middle of the room. Use cable bridges.
- Make sure that extension cables are completely unrolled.
- When positioning the device, keep a sufficient distance to heat sources.

- Make sure that no curtains or other objects interfere with the air flow.
- When positioning the device, particularly in wet areas, secure it locally with an RCD (residual current device) which complies with the respective regulations.

Notes regarding the dehumidification performance

The dehumidification performance depends on:

- the layout of the room
- the room temperature
- the relative humidity

The higher the room temperature and relative humidity, the greater the dehumidification performance.

For use in living rooms, a relative humidity of approx. 50 to 60 % is sufficient. In storage facilities and archives, the humidity should not exceed approx. 50 %.


Inserting the air filter

Note

Do not operate the device without an air filter inserted into the air inlet!


Without the air filter, the inside of the device will be heavily contaminated. This could reduce the performance and result in damage to the device.

- Make sure that the air filter is installed before switching the device on.

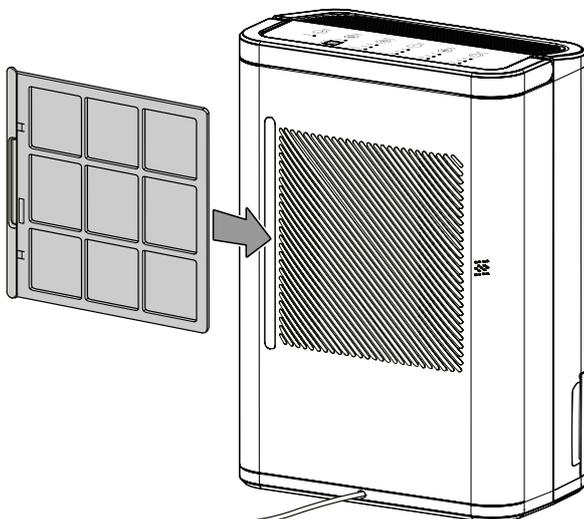

Inserting the condensation tank

- Ensure that the float inside the condensation tank is inserted correctly.
- Ensure that the condensation tank is empty and inserted correctly.

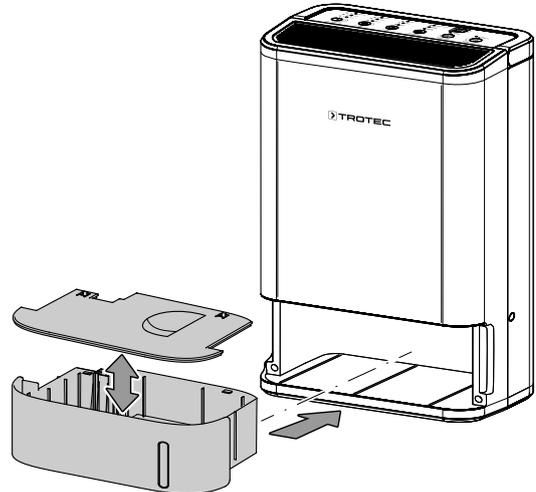


Connecting the power cable

- Insert the mains plug into a properly secured mains socket.

Operation

- After being switched on, the device operates fully automatically – depending on the selected operating mode or until the float indicates that the condensation tank is full and the device switches itself off.
- Avoid open doors and windows.

Operating elements

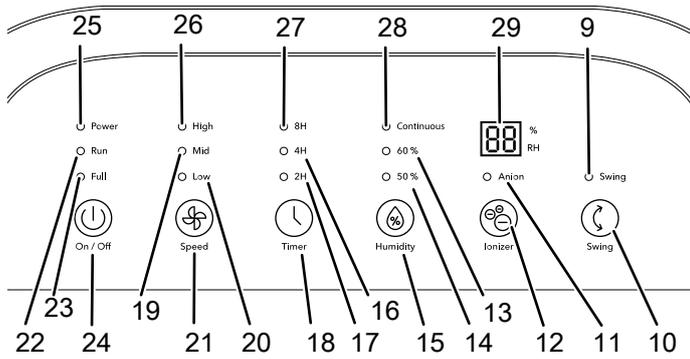

No.	Designation	Meaning
9	Swing LED	Illuminated when swing function is activated
10	Swing button	Switching the swing function on or off
11	Anion LED	Illuminated when ionizer function is activated
12	Anion button	Switching the ionization function on and off
13	60 % relative humidity LED	Is illuminated when a relative humidity level of 60 % is set
14	50 % relative humidity LED	Is illuminated if a relative humidity of 50 % is set
15	Humidity button	Switching continuous operation on or off Setting the relative humidity level (50 % or 60 % RH)
16	4 h timer LED	Illuminated when the timer is activated: 4 h
17	2 h timer LED	Illuminated when the timer is activated: 2 h
18	Timer button	Switching the timer function on or off
19	Med LED	Illuminated when a medium fan speed is set
20	Low LED	Illuminated when a low fan speed is set
21	Speed button	Setting the fan speed
22	Run LED	Is illuminated in green when the device has been switched on

No.	Designation	Meaning
23	Full LED	Is illuminated when the condensation tank is full or not positioned properly.
24	On/off button	Switching the device on or off
25	Power LED	Is illuminated in red = standby or when tilt protection has been triggered
26	High LED	Illuminated when a high fan speed is set
27	8 h timer LED	Illuminated when the timer is activated: 8 h
28	Continuous LED	Is illuminated when continuous operation is activated.
29	Humidity level indication	Indication of the current room humidity level

Switching the device on

Once you have completely installed the device as described in the chapter Assembly and start-up, you can switch it on.

Note

Wait for 3 minutes before you switch the device back on (e.g. after draining the condensation tank).

1. Use the *On/Off* button (24) to switch the device on.
⇒ The *Run* LED (22) is illuminated.

Setting the operating mode

Ventilation mode

The device can be set to three fan speeds: *low*, *med* and *high*.

Low:

The device operates at low fan speed to save energy and keep the operating noise to a minimum.

Med:

The device operates at normal fan speed.

High:

The device operates at high fan speed.

Select the fan speed as follows:

1. Press the *Speed* button (21) until the desired LED for the fan speed is lit.

Setting the desired relative room humidity

You can set a desired relative room humidity level of 50 % or 60 %. To do so, please proceed as follows:

1. Press the *Humidity* button (15) until the desired room humidity level has been set.
⇒ The humidity level indication (29) shows the value for the current room humidity level.

Continuous operation

The device dehumidifies the air constantly and regardless of the relative humidity.

The desired relative room humidity cannot be adjusted in this operating mode.

1. Press the *Humidity* button (15) until the *Continuous* LED (28) is illuminated.

Ionization function

With this function, the room air is not only cleaned by means of the air filter, but additionally by means of anions. The released anions remove pollen, dust, viruses and bacteria from the room air.

1. Press the *Anion* button (12).
⇒ The *Anion* LED (11) is illuminated.
⇒ The ionization function is switched on.
2. Press the *Anion* button (12) again to deactivate the ionization function.
⇒ The *Anion* LED (11) goes out.

Swing function

With the swing function being switched on, the air flaps move automatically and ensure continuous air circulation. The air circulates out of the device from the top.

1. Press the *Swing* button (10).
⇒ The *Swing* LED (9) is illuminated.
⇒ The swing function is activated.
2. Press the *Swing* button (10) again to deactivate the swing function.
⇒ The *Swing* LED (9) goes out.

Setting the timer

For the device to switch off automatically after a predefined number of hours (2, 4 or 8 hours) you can program the timer.

Note

The device must not be left unattended in a freely accessible room with an activated timer.

Automatic switch-off

- ✓ The device is switched on.
1. Press the *Timer* button (18) until the 2 h Timer LED (17), the 4 h Timer LED (16) or the 8 h Timer LED (27) is illuminated.
⇒ After the predefined time, the device switches itself off.

Notes regarding automatic switch-off:


- Manually switching the device off disables the automatic switch-off function.
- The device switches off automatically when the condensation tank is full, even if the timer is active. Once the water tank has been emptied, the device continues counting down the remaining hours of the timer.

Operation with hose attached to the condensation connection


At a high humidity level it is recommendable to constantly drain the condensate via a hose, for otherwise the condensation tank has to be emptied too frequently. The hose is not included in the scope of delivery.

To do so, proceed as follows:


- ✓ A suitable hose (diameter: 14 mm) is ready for use.
 - ✓ The device is switched off.
1. Remove the condensation tank (5) with cover (30).

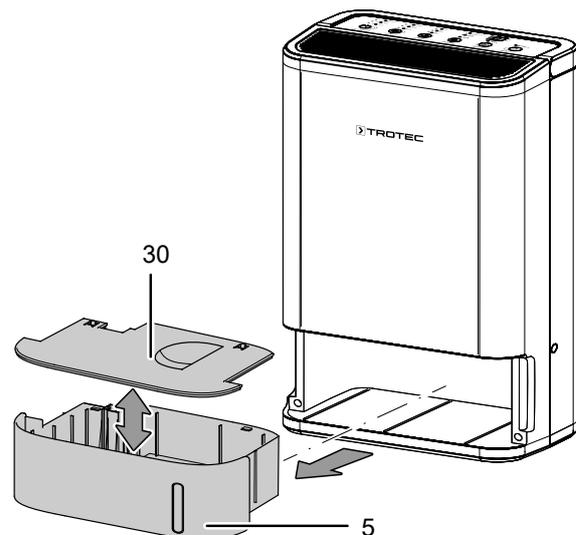

2. Remove the plastic cover for the condensation connection on the housing.
3. Push one end of the hose onto the condensation hose connection (4).

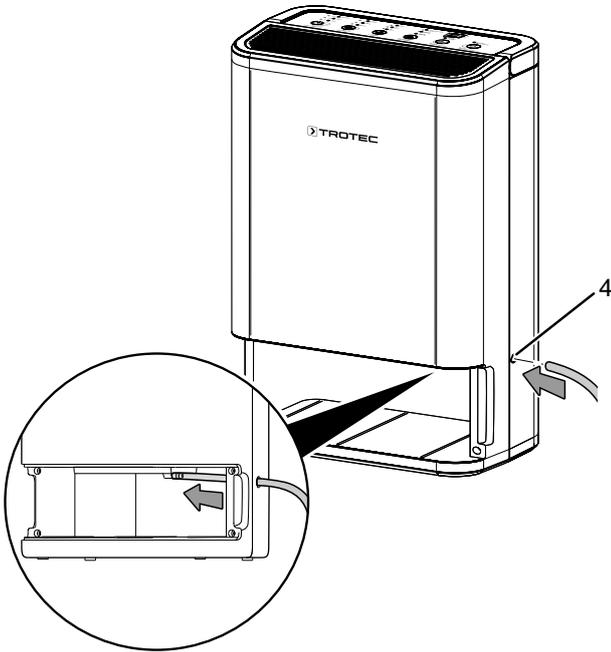

4. Reinsert the condensation tank (5) with cover (30).
5. Guide the other hose end to a suitable drain or sufficiently dimensioned collection container. Please note that the hose must not be kinked.

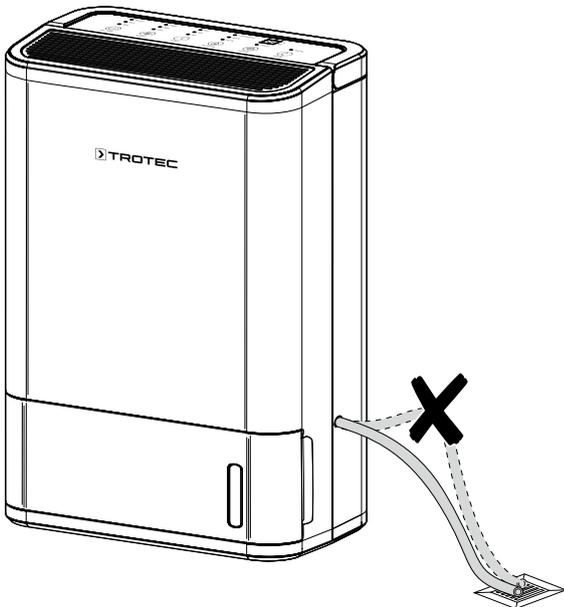

Shutdown



Warning of electrical voltage

Do not touch the mains plug with wet or damp hands.

- Press the *On/Off* button (24).
- Wait for 4 minutes.
 - Due to the rundown time of the internal components, the device only switches off after 4 minutes.
- Hold onto the mains plug while pulling the power cable out of the mains socket.
- If necessary, remove the condensation hose.
- Empty the condensation tank, if need be.
- Clean the device according to the Maintenance chapter.
- Store the device according to the Transport and storage chapter.

Errors and faults

The device has been checked for proper functioning several times during production. If malfunctions occur nonetheless, check the device according to the following list.

The device does not start:

- Check the power connection.
- Check the power cable and mains plug for damage.
- Check the on-site fusing.
- The device comes equipped with a tilt protection, it switches off automatically when tilted. If the *Power LED (25)* is illuminated in red, check whether the device is standing in an upright position and on a level surface.
- Check the condensation tank for correct seating.
- Check the room temperature and the current room humidity level. If the current room humidity level is below the room humidity level set, the device will not switch on. Observe the device's permissible operating range according to the technical data.
- At an ambient temperature above 36 °C, the heating is switched off automatically making condensate formation impossible.
- Wait for 10 minutes before restarting the device. If the device is not starting, have the electrics checked by a specialist company or by Trotec.

The device is running, but there is no formation of condensate:

- Check the float in the condensation tank for dirt. If necessary, clean the condensation tank. The float must be able to move freely.
- Check the room temperature and the current room humidity level. If the current room humidity level is below the room humidity level set, the device will not switch on. Observe the device's permissible operating range according to the technical data.
- Ensure that the relative room humidity complies with the technical data.
- Check the air filter for dirt. If necessary, clean or replace the air filter.
- Check the air filter for dirt. If necessary, clean or replace the air filter.
- From the outside, check the condenser for dirt (see chapter Maintenance). If the condenser is dirty, have it cleaned by a specialist company or by Trotec.

The device is loud or vibrates:

- Check whether the device is set up in a stable and upright position.

Condensate is leaking:

- Check the device for leaks.

The device gets very warm, is loud or is losing performance:

- Check the air inlets and air filters for dirt. Remove external dirt.
- From the outside, check the device for dirt (see chapter Maintenance). If the inside of the device is dirty, have it cleaned by a specialist company for cooling and air-conditioning or by Trotec.

The device still does not operate correctly after these checks:

Please contact the customer service. If necessary, bring the device to a specialist company for cooling and air-conditioning or to Trotec for repair.

Maintenance

Maintenance intervals

Maintenance and care interval	before every start-up	as needed	at least every 2 weeks	at least every 4 weeks	at least every 6 months	at least annually
Check air inlet and outlet for dirt and foreign objects and clean if necessary	X			X		
Clean the exterior		X				X
Visually check the inside of the device for dirt		X				X
Check the air filter for dirt and foreign objects and clean or replace if necessary	X		X			
Replace the air filter		X				
Check for damage	X					
Check the attachment screws		X				X
Test run						X
Empty and clean the condensation tank and/or drain hose		X				

Maintenance and care log

Device type:

Device number:

Maintenance and care interval	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Check air inlets and outlets for dirt and foreign objects and clean if necessary																
Check the air filter for dirt and foreign objects and clean or replace if necessary																
Clean the exterior																
Visually check the inside of the device for dirt																
Replace the air filter																
Check the attachment screws																
Test run																
Empty and clean the condensation tank and/or drain hose																
Comments																

1. Date:	2. Date:	3. Date:	4. Date:
Signature:	Signature:	Signature:	Signature:
5. Date:	6. Date:	7. Date:	8. Date:
Signature:	Signature:	Signature:	Signature:
9. Date:	10. Date:	11. Date:	12. Date:
Signature:	Signature:	Signature:	Signature:
13. Date:	14. Date:	15. Date:	16. Date:
Signature:	Signature:	Signature:	Signature:

Activities required before starting maintenance



Warning of electrical voltage

Do not touch the mains plug with wet or damp hands.

- Switch the device off.
- Hold onto the mains plug while pulling the power cable out of the mains socket.
- Allow the device to cool down completely.



Warning of electrical voltage

Tasks which require the device to be opened must only be carried out by authorised specialist companies or by Trotec.

Safety signs and labels on the device


Check the safety signs and labels attached to the device at regular intervals. Replace illegible safety signs!

Cleaning the housing

Clean the housing with a soft, damp and lint-free cloth. Make sure that no moisture enters the housing. Protect electrical components from moisture. Do not use any aggressive cleaning agents such as cleaning sprays, solvents, alcohol-based or abrasive cleaners to dampen the cloth.

Visual inspection of the inside of the device for dirt

1. Remove the air filter.
2. Use a torch to illuminate the openings of the device.
3. Check the inside of the device for dirt.
4. If you see a thick layer of dust, have the inside of the device cleaned by a specialist company for cooling and air-conditioning or by Trotec.
5. Put the air filter back in.

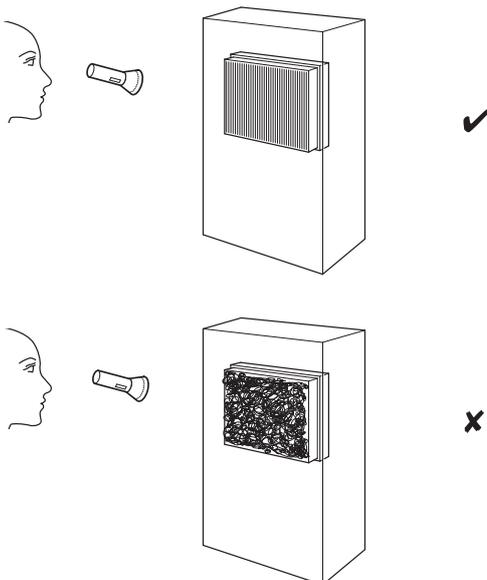


Cleaning the air filter

Note


Ensure that the air filter is not worn or damaged. The corners and edges of the air filter must not be deformed or rounded. Before reinserting the air filter, make sure that it is undamaged and dry!

The air filter has to be cleaned as soon as it is dirty. This is brought to light e.g. by a reduced capacity (see chapter Errors and faults).

1. Remove the air filter from the device.

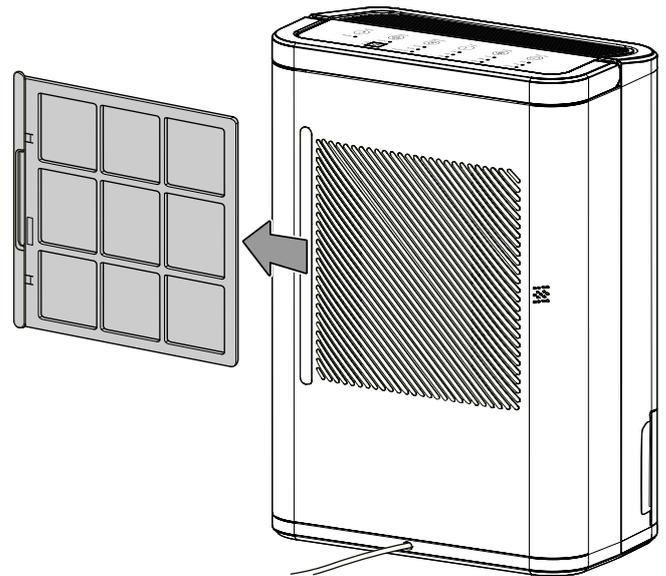


2. Clean the filter using a slightly damp, soft, lint-free cloth. If the filter is heavily contaminated, clean it with warm water mixed with a neutral cleaning agent.

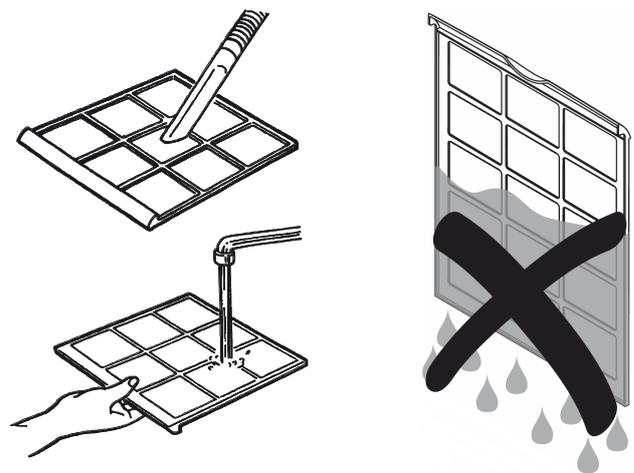


3. Allow the filter to dry completely. Do not insert a wet filter into the device!

4. Reinsert the air filter into the device.

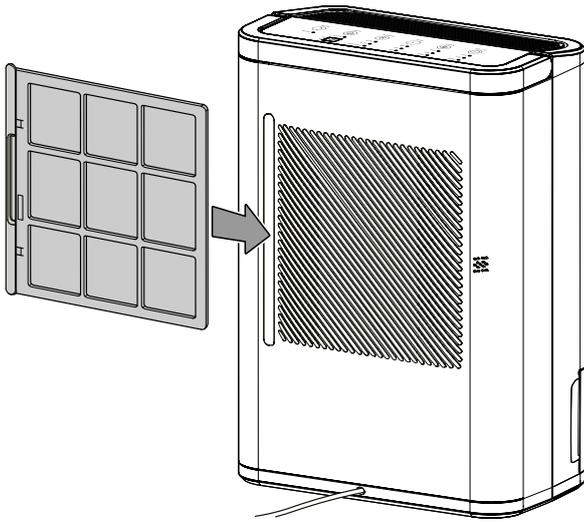

3. Empty the condensation tank (5) over a drain or sink.


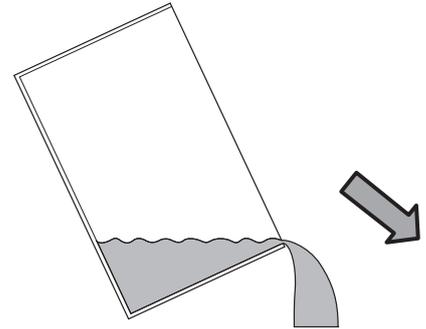


Emptying the condensation tank

If the condensation tank (5) is full or not installed correctly, the *Full* LED (23) will be illuminated. Then the device will stop and switch off.

1. Take the condensation tank (5) out of the device.
2. Remove the cover (30) from the condensation tank (5).

4. Rinse the condensation tank (5) with clear water. Clean the condensation tank (5) at regular intervals using a mild cleaning agent (no detergent!).
5. Reattach the cover (30) to the condensation tank (5).
6. Refit the condensation tank (5) into the device. Make sure not to damage the float when inserting or removing the condensation tank (5).
 - ⇒ In doing so, make sure that the float is positioned correctly.
 - ⇒ In doing so, make sure that the condensation tank (5) is inserted correctly, for otherwise the device cannot be switched back on.

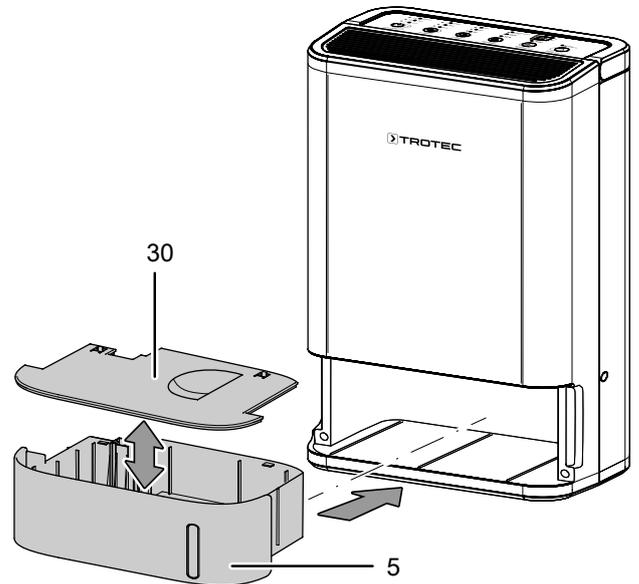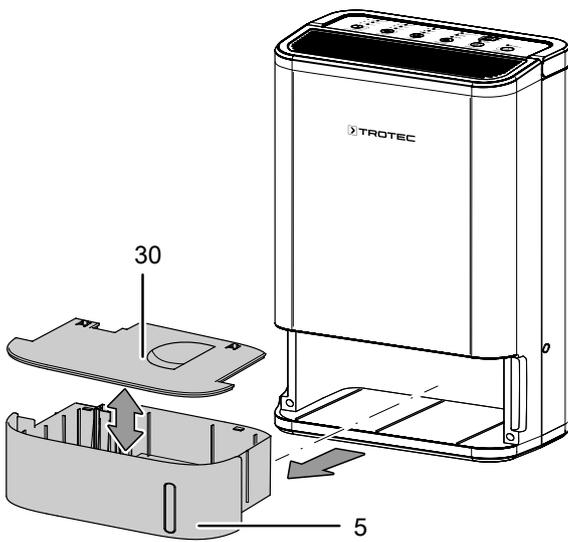

Activities required after maintenance

If you want to continue using the device:

- Leave the device to rest for one hour before switching it back on. Otherwise the device could be damaged and no longer work properly. Any warranty claims will be voided in this case.
- Reconnect the device to the mains.

If you do not intend to use the device for a considerable time:


- Store the device according to the Transport and storage chapter.

Technical annex

Technical data


Parameter	Value
Model	TTR 50 E
Max. dehumidification performance	7.5 l / 24 h
Dehumidification performance @ 30 °C and 80 % RH	7 l
Amount of air	126 m ³ /h
Operating range (temperature)	-10 °C to 35 °C
Operating range (relative humidity)	35 % to 75 %
Mains connection	220 – 240V ~ 50 / 60 Hz
Max. power input	650 W
Nominal current consumption	2.7 A
Type of protection	IPX0
Protection class	II / 
On-site fusing	10 A
Condensation tank capacity	2.5 l
Sound pressure level	38 dB (A)
Dimensions (length x width x height)	200 x 300 x 455 mm
Minimum distance to walls and other objects	A: top 30 cm B: rear 30 cm C: side 30 cm D: front 30 cm
Weight	6 kg

Wiring diagram

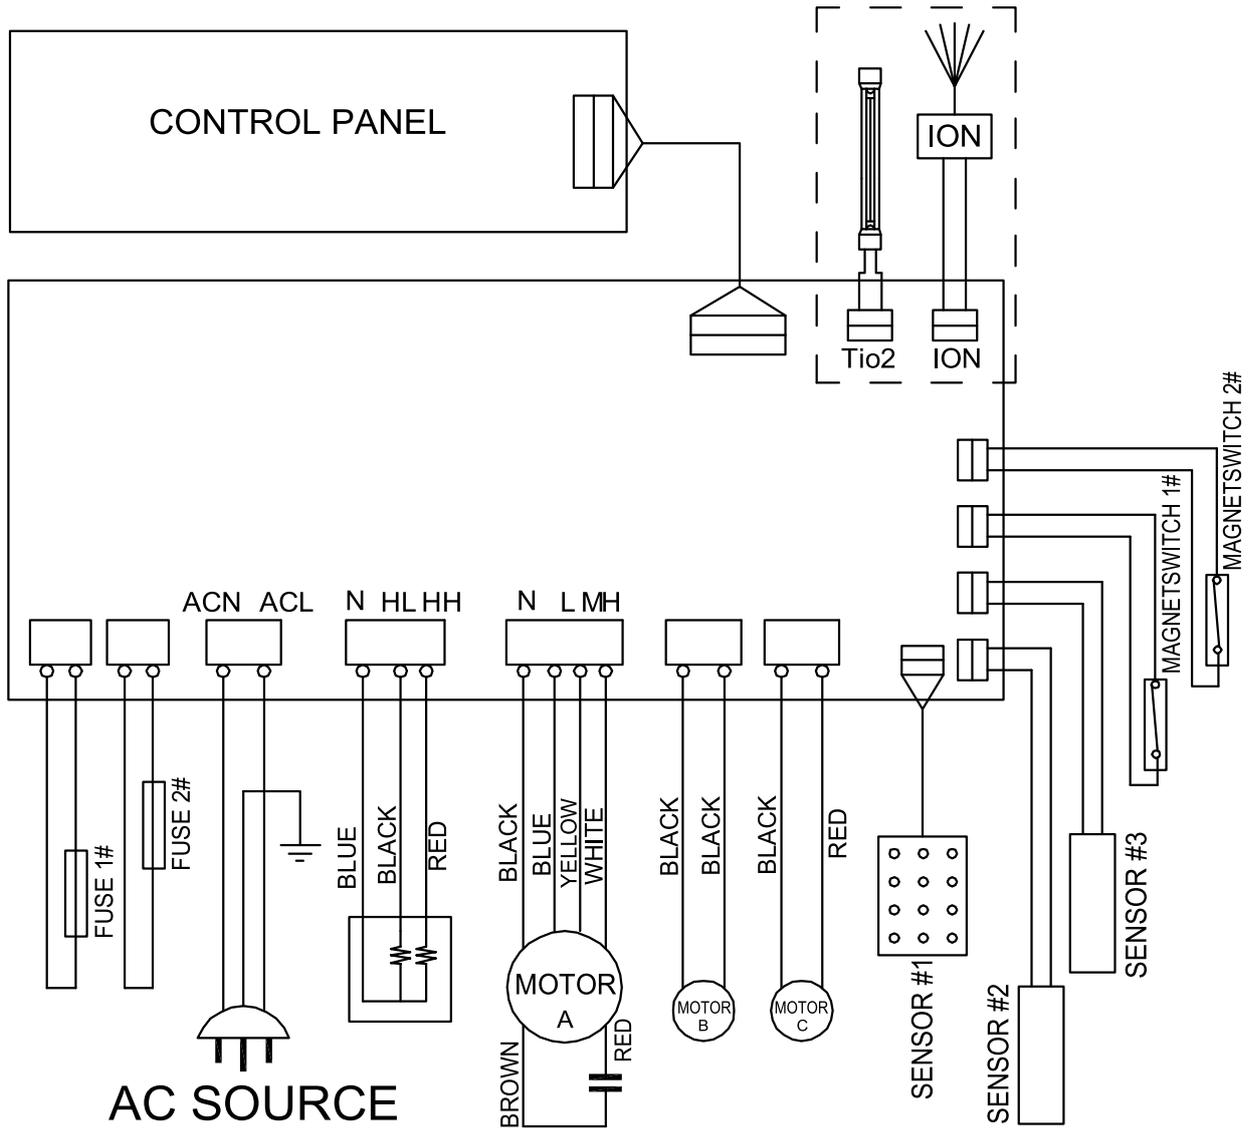

Overview of spare parts

Note: The position numbers of the spare parts differ from those describing the positions of other parts mentioned in this operating manual.

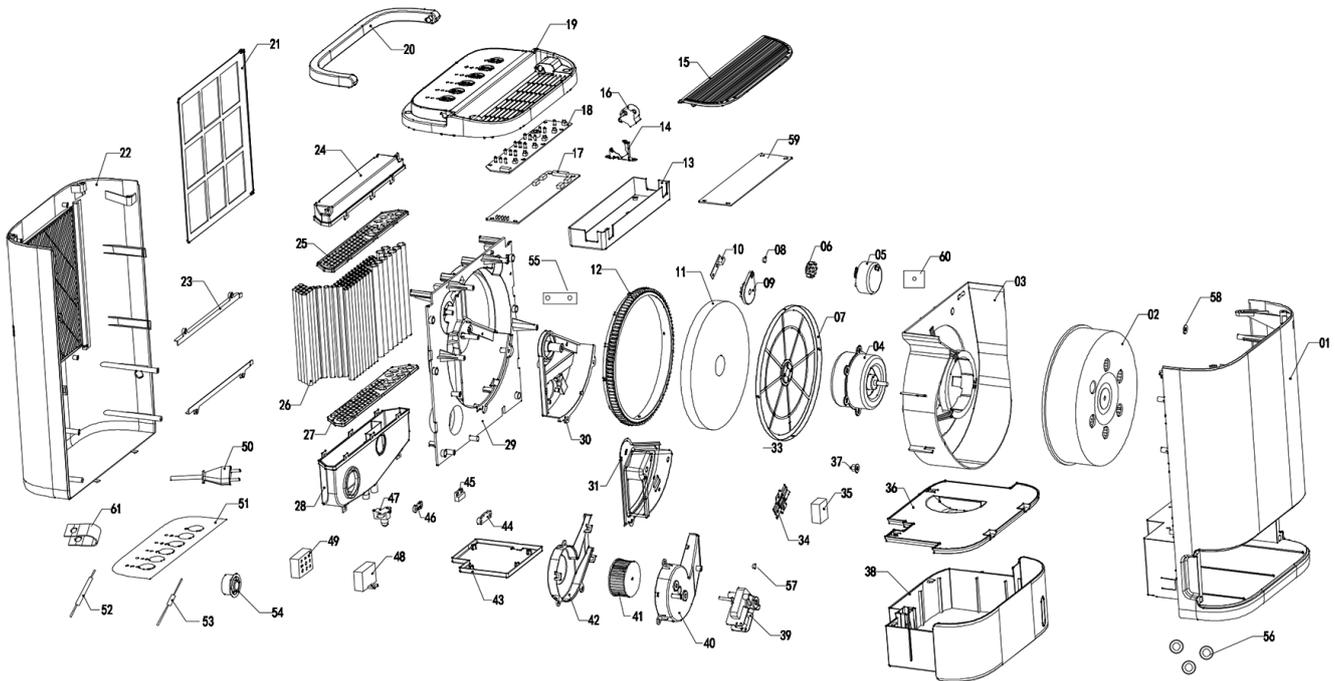

No.	Spare Part	No.	Spare Part	No.	Spare Part
1	Front cover	19	Top cover	42	Air duct II
2	Centrifugal rotor	22	Back cover	44	Anti fall switch seating
3	Wheel cover	23	Guide rail I/II	45	Microswitch
4	Shade-pode ventor	24	Heat exchanger cover A 1	46	Line pressing code
5	Synchronous motor	25	Heat exchanger cover A 2	47	Anti-fall switch
6	Gear 1	26	Rubber sac	48	Motor capacitor
7	Shield electrode	27	Heat exchanger cover B 2	49	Humidification sensor
8	Magnet of counter component cover	28	Heat exchanger cover B 1	50	Power line
9	Counter component cover	29	Wheel bracket	51	Paster
10	Pin board	30	Hingle	53	High temperature thermistor
11	Dehumidification wheel	31	Heating element	54	Wheel sleeve
12	Gear II	35	Water level float	55	Sheeting
13	Electric control box	36	Water tank cover	56	Foot pads
14	Fixed fan bracket	37	Nut	57	Nut
15	Air deflector	38	Water tank	58	Gasket
16	Stepper motor	39	Shade pole motor	59	Power pack cover
17	Control panel	40	Air duct I		
18	Button panel	41	Centrifugal rotor		

Disposal

Always dispose of packing materials in an environmentally friendly manner and in accordance with the applicable local disposal regulations.



The icon with the crossed-out waste bin on waste electrical or electronic equipment stipulates that this equipment must not be disposed of with the household waste at the end of its life. You will find collection points for free return of waste electrical and electronic equipment in your vicinity.

The addresses can be obtained from your municipality or local administration. You can also find out about other return options that apply for many EU countries on the website <https://hub.trotec.com/?id=45090>. Otherwise, please contact an official recycling centre for electronic and electrical equipment authorised for your country.

The separate collection of waste electrical and electronic equipment aims to enable the re-use, recycling and other forms of recovery of waste equipment as well as to prevent negative effects for the environment and human health caused by the disposal of hazardous substances potentially contained in the equipment.

Only for United Kingdom

According to Waste Electrical and Electronic Equipment Regulations 2013 (SI 2013/3113) (as amended) devices that are no longer usable must be collected separately and disposed of in an environmentally friendly manner.

Trotec GmbH

Grebener Str. 7
D-52525 Heinsberg

☎ +49 2452 962-400

☎ +49 2452 962-200

✉ info@trotec.com

www.trotec.com